

# CETOL BL GARDEN FURNITURE CLEANER

## TECH SHEET



### DESCRIPTION

A fast-acting gel that takes just 15 minutes to revitalise and brighten grey and weathered timber garden furniture.

### GENERAL NOTES

<b>Main Characteristics</b>	<ul style="list-style-type: none"> <li>• Non-drip gel ideal for vertical surfaces.</li> <li>• Easy to use.</li> <li>• Fast acting – takes just 15 minutes to brighten grey weathered timbers.</li> </ul>
<b>Uses</b>	To brighten and revitalise grey, weathered timber garden furniture in preparation for application of new coatings.

### APPLICATION DATA

<b>Temperature of Application</b>	Do not apply in temperatures below 5oC or if rain is due before the job is complete.
<b>Method</b>	<p>Wet timber before application to delay drying out. Timber must stay wet during the whole application process. Apply Cetol BL Garden Furniture Cleaner to surface to be treated.</p> <p>Work into the surface with an abrasive scrubbing pad or stiff bristle brush / broom.</p> <p>Leave to stand until no further lightening occurs, but no more than 15 minutes. If timber begins to dry out, lightly spray with water to re-wet the surface.</p> <p>Work manageable areas at a time to ensure the timber stays wet during the entire process.</p> <p>Wash off with plenty of water using a hose until the water runs clear. Allow the timber to thoroughly dry out – at least 3 days – before applying your chosen Sikkens finish.</p>
<b>Cleaning of Equipment</b>	Remove as much of the product before rinsing equipment thoroughly in water.
<b>Coverage Rate</b>	Up to approx. 8m <sup>2</sup> per litre. Depending on application method, the condition and nature of the surface.
<b>Packaging</b>	1 litre cans.
<b>Caution</b>	<p>Wear suitable protective gloves.</p> <p>Avoid contact with grass and plants as it may cause browning or dieback.</p> <p>If contact occurs dilute with copious amounts of water.</p> <p>Clean any spills while still wet.</p>